

School Uniform: Iron-on Badges


Our heat-bonded, embroidered emblems are easy to apply using a standard domestic iron. There's no sewing involved, so anyone can get a professional looking finish in minutes. The special heat backing uses the very latest bonding agents and – once the badge is in place – it is fully machine washable and can be ironed as normal. The polyester threads are colourfast and will not pucker. The emblems are designed to bond to most widely used fabrics containing: cotton, polyester, acrylic and mixtures.



Application Instructions

You will need:

- an iron
- a firm flat surface - a table is better than an ironing board
- a damp sponge
- a thin piece of cloth
- your garment
- an iron-on emblem

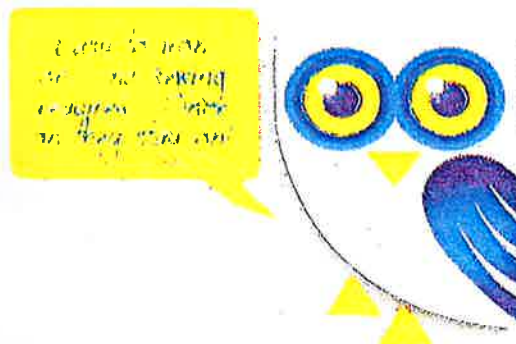


1. Switch on your iron, set it to the maximum temperature and allow it to warm up.
2. Very lightly dampen the area where you want to apply the emblem.
3. Place the emblem with the embroidery facing you.
4. Cover the emblem with the thin cloth and press as firmly as you can for 60 seconds on both sides of the garment. Do not use steam.
5. Turn the garment inside out and repeat the process.
6. Check that the edges are properly bonded and allow the garment to cool
7. The bond reaches maximum strength after 24 hours, so try to avoid wearing the garment during that period.
8. The garment can be washed according to the care label.

Positioning the emblem

The bottom of the emblem needs to be lined up with the bottom of the button band, and positioned 3" - 4" from the centre of the garment:

For a polo shirt ...

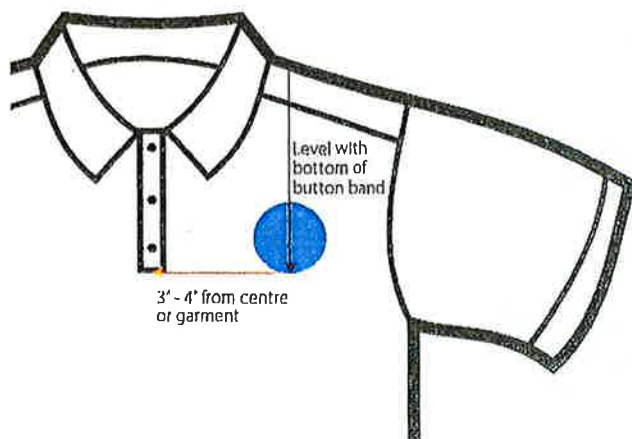

For a sweatshirt or t-shirt ...

